



ASSEMBLING THE LOCK

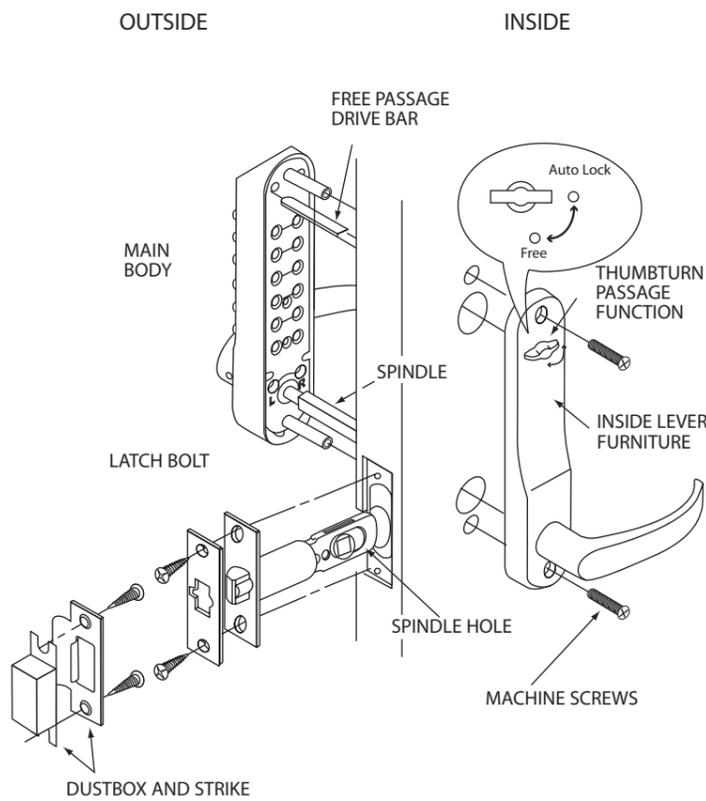


INSTALLATION

1. PREPARE THE DOOR IN ACCORDANCE WITH THE TEMPLATE. ENSURE THAT YOU MAKE THE CORRECT CHOICE OF BACKSET LENGTH. CHECK THIS CAREFULLY AGAINST THE LATCH PROVIDED. 60MM IS STANDARD.
2. INSTALL THE LATCH BOLT AND STRIKE PRIOR TO INSTALLING THE MAIN LOCK BODY.
3. MOUNT OUTSIDE LOCK BODY AS SHOWN AT EACH OF THE TWO POINTS.
4. REFER TO THE SECTION BELOW FOR CODE SETUP. ENSURE THAT THE CODE IS TESTED AND THAT THE LOCK WORKS SATISFACTORILY BEFORE ALLOWING THE DOOR TO CLOSE.
5. PLEASE REFER TO THE SECTION BELOW FOR AN EXPLANATION OF THE PASSAGE FUNCTION OPERATION.

HANDING THE LEVER

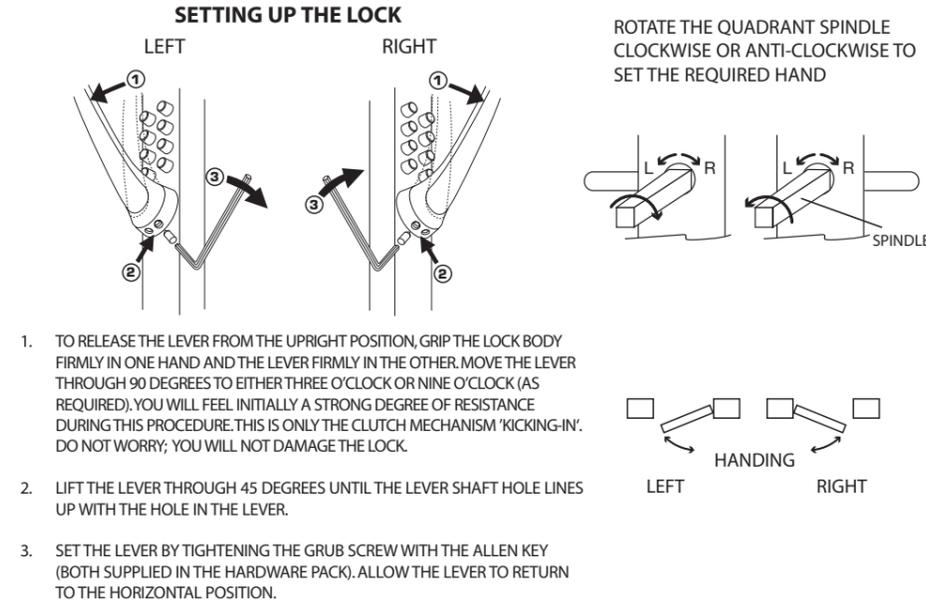

fold here for 60mm Backset

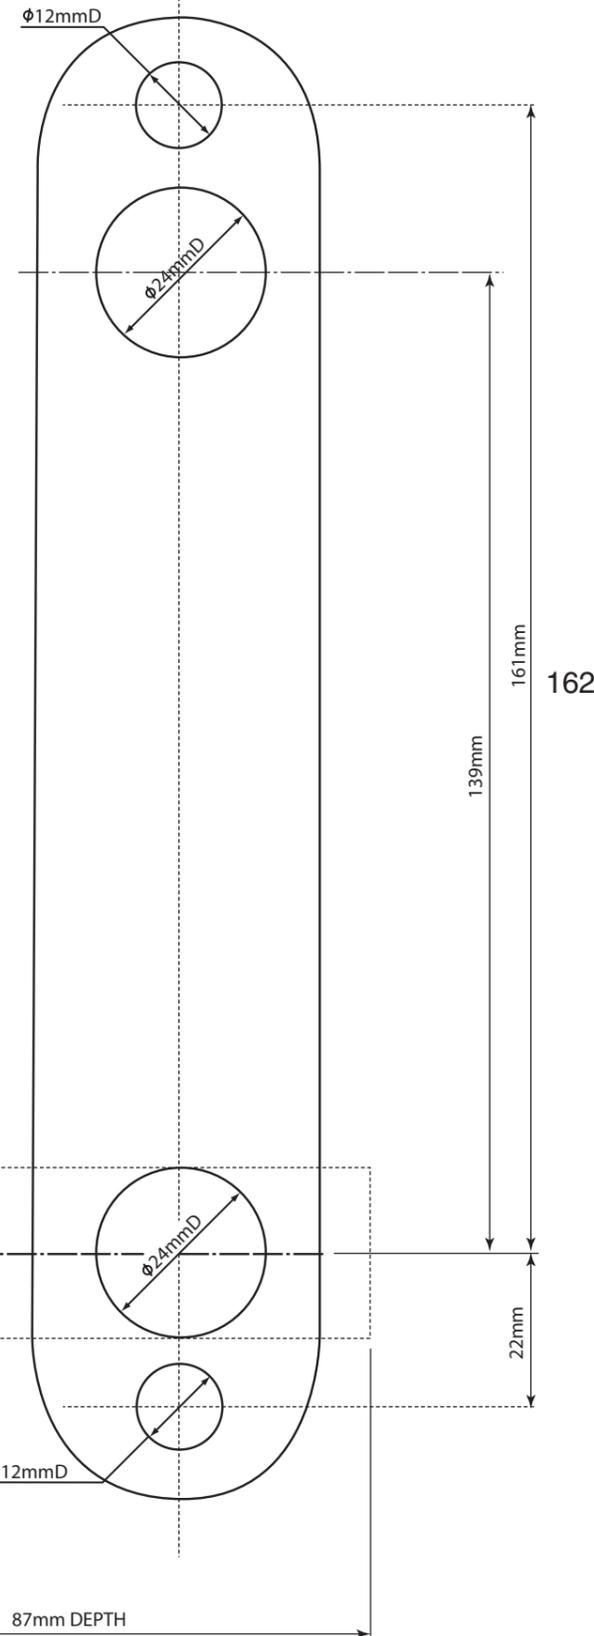

LOCK OPERATION & FUNCTION DESCRIPTION

Clearing Codes

It is essential that any 'spurious' code be cleared before operation of the lock from the outside. The 'C' clear button should be pressed as a precursor to the entry of your code.

Entering Codes

Codes should be ideally selected to contain between 3 and 6 digits and can include a mixture of letters and numerals. Buttons may be pressed in any order and must be pushed firmly to engage the code. Once the correct code is entered the lock may be used. If mistakes are made you may clear the code using the procedure described above.





Changing Codes

Code changing is fast and straightforward requiring only a slotted screwdriver once the lock body is removed from the door. Each button is marked with a single line at right angles to the screwdriver slot with corresponding marks adjacent on the back plate. Rotate the button to align the two marks thus setting that button as part of the code.

Setting the Passage Function

Keylex locks do not include a 'hold-back' facility. However, the passage function facility achieves the same end result. The door is opened using the correct code and (while the door is ajar) the passage function snib is set to 'free passage'. The lock is then free from either side until such time as the passage function snib is re-set.

NOTE - only authorised code holders can set the passage function feature. It is possible to modify the feature to include a removable key to restrict the feature to 'key holders' only.

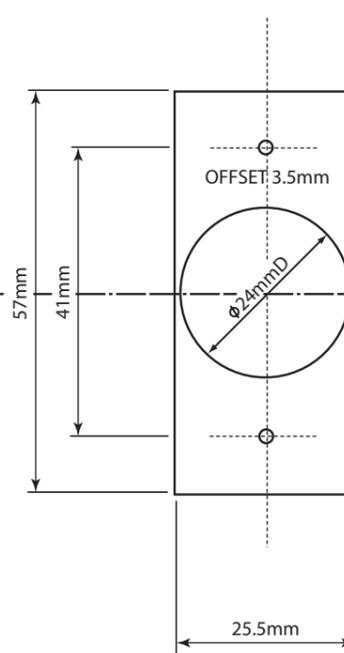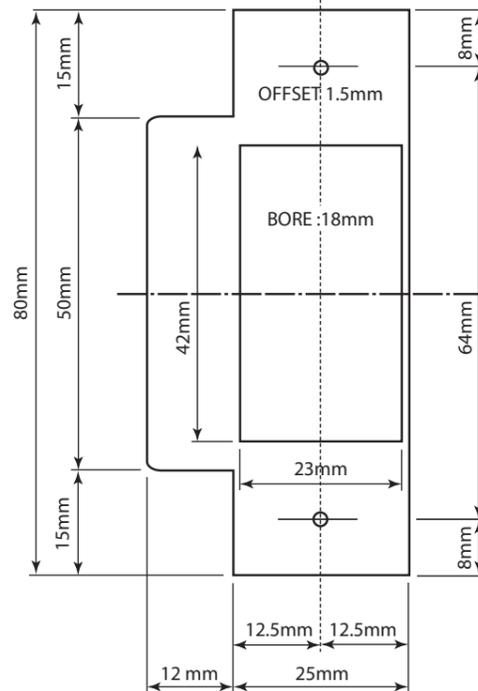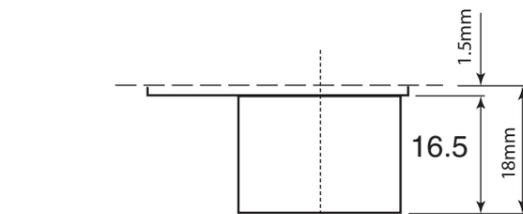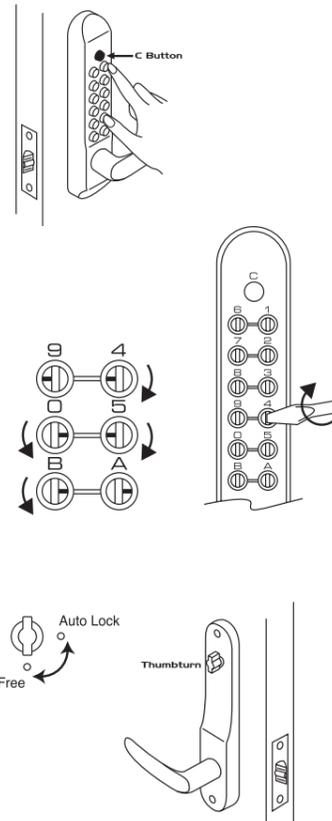

Relcross Ltd.,
Hambleton Avenue,
Dezives, Wiltshire
SN10 2RT United Kingdom

Tel: 01380 729600
Fax: 01380 729888
Email: sales@relcross.co.uk
Internet: www.relcross.co.uk