

BURTONSAFES

THE SURE DEFENCE

USER INSTRUCTIONS

STANDARD MKII



THANK YOU FOR PURCHASING A STANDARD MKII

Standard MKII is a high quality range of products, in normal circumstances, and provided the safe is properly fitted, it carries an overnight cash rating of £1,000, or ten times this sum for jewellery and valuables. If the precise rating is important it is advisable to check with your insurance company.

WARNING: NEVER LEAVE YOUR EMERGENCY KEY IN THE SAFE

DO NOT LUBRICATE THE LOCK. IF NECESSARY, LUBRICATE THE LOCKING BOLTS.

WARRANTY

- The Standard MKII carries a 2-year warranty in respect of materials and workmanship.
- The warranty is valid upon presentation of a receipt or invoice indicating date of purchase.

OPENING THE SAFE: FOR THE FIRST TIME

Upon first opening, users should open the safe with the emergency key.
Remove emergency lock cover, then insert the emergency key and turn it counter-clockwise.
Turn the knob (master key) clockwise to open the door.

PROGRAMMING YOUR OWN CODE INTO THE SAFE

With the door open, press the reset button one, start setting code when the yellow light goes on.
Input the new code (3-8 digits) and press the '#' button to confirm with 2 buzzer beeps, which indicates the acceptance and storage of the new code.
If the yellow light flashes with 3 buzzer beeps, which means the code changing is not effective and you need to try again.

BATTERY REQUIREMENTS

Open door
Insert 4 x 1.5V batteries into the battery compartment.
Under normal condition, if both of the red and the green lights are on at the same time it means the voltage is low and you should insert new batteries.

OPENING THE SAFE

Input your user code, (3-8 digits), each pressing results in one buzzer beep and yellow light flashes.
Press '#' or '*' button, the green light will be on.
Rotate the knob (master key) clockwise and pull outwards within 5 seconds, the door will open.

BURTONSAFES

THE SURE DEFENCE

USER INSTRUCTIONS

STANDARD MKII



AUTOMATIC LOCK

3 continuously wrong entries will activate the warning beep for 20 seconds.

CAUTION: The key pad would be disabled during the beeping. You can only stop the beeps by opening the safe with the emergency key and power-cut by removing the battery.

WARNING! NEVER LEAVE YOUR EMERGENCY KEY IN THE SAFE

SETTING MASTER CODE

Open the safe, input '0' twice and press reset button, start setting the code when the yellow light goes on.

Input the new master code (3-8 digit), then press '#' or '*' button to confirm. It will be confirmed by two beeps and the yellow light flashing twice then setting is done successfully.

If the yellow light flashes three times, it means the new code is invalid and should operate again.

OPENING THE SAFE WITH THE EMERGENCY KEY

Upon first receipt of the safe, or either the electric circuit malfunction or codes are unknown. You could also use the emergency key to open the safe.

Remove the cover of the emergency cover.

Insert the emergency key, turn it counter-clockwise, then turn the knob (master key) clockwise to open the door.

AFTER-SALE TECHNICAL ASSISTANT

If in doubt, ask for advice from the retail stockist where you made your purchase.