

B) New Installation

Step 1 Place template on door and mark upper and lower 6mm (1/4") fixing holes and 16mm (5/8") spindle hole.

IMPORTANT NOTE: Before drilling fixing holes, please ensure the position of the cabinet lock when fitted will allow enough clearance for selected cam to work.

Step 2 Drill all three fixing holes.

Step 3 Continue installation from step 4 to 7 from the Installation Guide section A).



CODELOCKS LTD UK
Tel: +44 (0) 1635 239645
Fax: +44 (0) 1635 239644
sales@codelocks.co.uk
Helpline, service & spares
FREEPHONE 0800 393 405

CODELOCKS CHINA
Tel: +86 757 8660 1981-3
Fax: +86 757 8660 1980

CODELOCKS US
Tel: +1 714 979 2900
Fax: +1 714 979 2902
sales@codelocks.us
Help: 1.877.CODELOCK

www.codelocks.com



CODELOCKS


**CABINET
LOCK 1200
ELECTRONIC**

CL1200 Installation Instructions

FITTING INSTRUCTIONS

The Cabinet Lock can be fitted to:

- A) Cabinets, cupboards and lockers etc as a direct replacement for existing cam locks.
- B) It can also be easily be fitted to cupboards and cabinets that do not have an existing locking device.

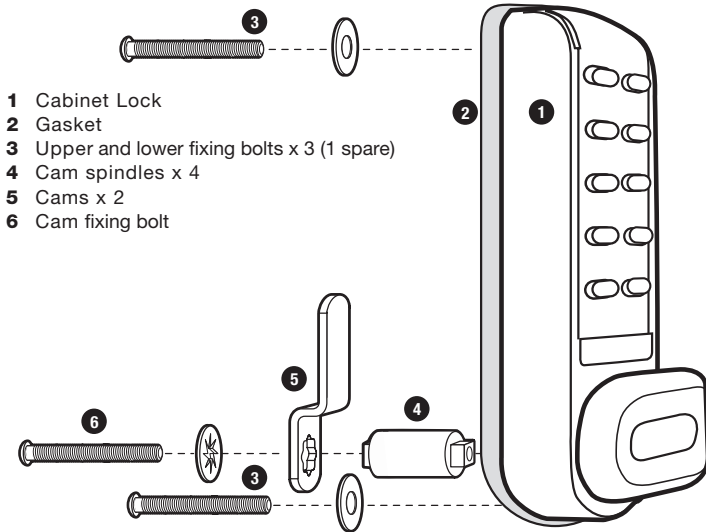

- 1 Cabinet Lock
- 2 Gasket
- 3 Upper and lower fixing bolts x 3 (1 spare)
- 4 Cam spindles x 4
- 5 Cams x 2
- 6 Cam fixing bolt

SPECIAL NOTES

- Before installing the lock, load the batteries and familiarise yourself with the **operation and programming**.
- The handle will not turn until you enter the factory default **Master Code 11 33 55 77 or the User code 22 44**.
- Please see Programming Guide to **now set your new Master and User Codes** and to set different functions on lock if required.

INSTALLATION GUIDE

A) Replace existing cam lock with the Cabinet Lock

- Step 1** Remove existing cam lock.
- Step 2** Place the template over the hole left by the cam lock and mark the upper and lower fixing holes.
- Step 3** Drill the two 6mm (1/4") fixing holes.
- Step 4** Fit lock to door with gasket in place using fixing bolts. Cut bolts to correct length. Measured from beneath the bolt head, the length should be the cabinet thickness, **plus** approx 12mm (1/2").
- Step 5** From the inside of the door select and fit appropriate cam spindle and cam using cam fixing bolt supplied. The length of cam and spindle selected to suit your door and frame.
- Step 6** Before closing the door check the operation of the lock with Master and User Code.
- Step 7** If not changed already **CHANGE FACTORY SET MASTER AND USER CODE NOW!**